



801-262-4017 Covers@SewLong.com 3555 s. Main ST. SLC, UT, 84115



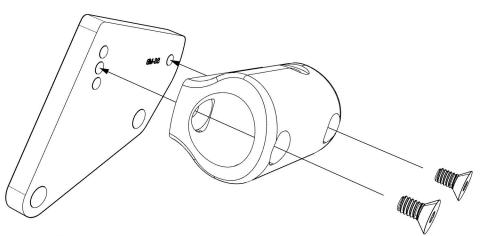


1 Install Receiver:

- Attach the shade sail receiver to the MB mounting plate.
- Ensure the receiver's open end faces the plate's multi-hole side.
- Start with the middle adjustment option; you can change it later if needed.
- Mirror the installation on both port and starboard sides.

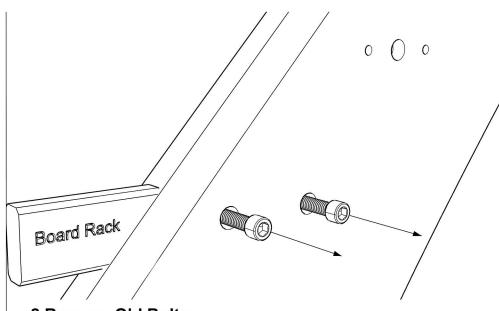

2 Remove Old Bolts

- Remove and discard the socket head bolts holding the board racks.

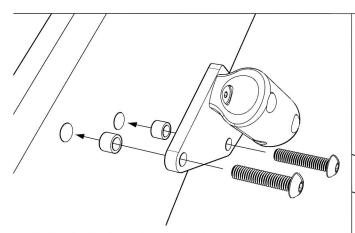


3 Install Receiver Plate

- Apply blue Loctite to the button head bolts.
- Attach the receiver plate with the bolts and spacers.
- Repeat on the other side.
- Tighten all bolts securely.

4 Insert Carbon Fiber Poles

- Place carbon fiber poles into the receivers.
- The tension of the shade sail will hold the poles in place.

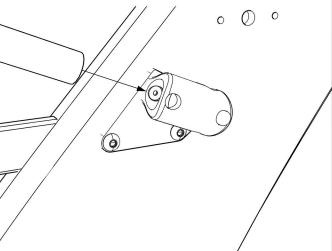

5 Install Shade Sail Canvas

- Attach side release buckles around the Bimini frame.
- Place grommets around the aluminum ends of the shade sail at the tips of the carbon fiber poles.

