

KEY

-  Right side of fabric
-  Wrong side of fabric (plotted side)
- SRBF** Side Release Buckle (Female)
- SRBM** Side Release Buckle (Male)
- SC** Shock Cord
- W** Webbing
-  Origin Point (Start Sewing Here)

1 Webbing

1.1

W36-SRBF W46-SRBM



1.2



1.3



1.4



2 Boxing


2.1



2.2




2.3

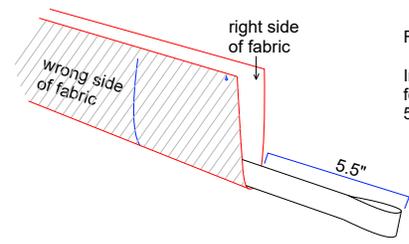

Fold boxing in half with right sides together.

Insert the 36" webbing (W36-SRBF) inside the folded boxing so that the looped webbing sits 5.5" outside of the boxing.

2.4

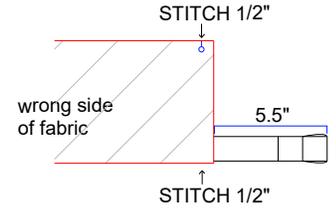

STITCH 1/2"

wrong side of fabric


5.5"

STITCH 1/2"

Stitch the end of the boxing with 1/2" seam allowance while also stitching through the webbing.

***Repeat same steps on other end of boxing with 46" webbing (W46-SRBM)

2.5

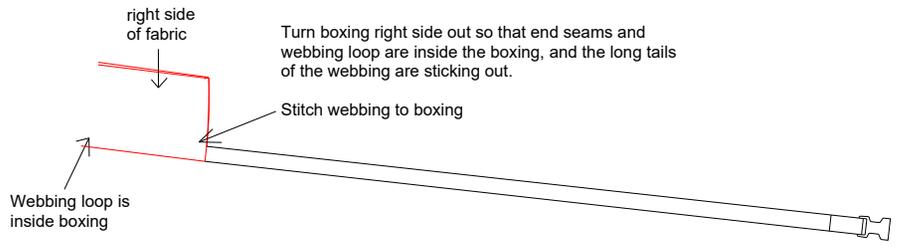

right side of fabric


Webbing loop is inside boxing

Stitch webbing to boxing

Turn boxing right side out so that end seams and webbing loop are inside the boxing, and the long tails of the webbing are sticking out.

3 Shock Cord

3.1

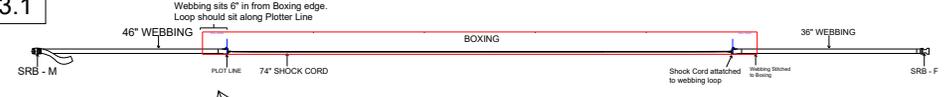


Webbing sits 6" in from Boxing edge. Loop should sit along Plotter Line

46" WEBBING 74" SHOCK CORD 36" WEBBING

SRB - M Shock Cord attached to webbing loop Shock Cord attached to webbing loop SRB - F

Attach Shock Cord to webbing loops on both ends of the boxing.

Inside View of Boxing

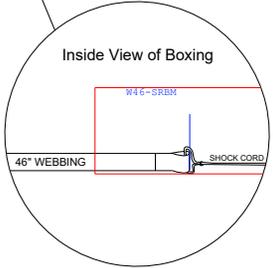

46" WEBBING SHOCK CORD

			Pattern No: 1355	Title: Sew 1
			Drawn By: Bekah H (Baylee V)	Boat Model: Malibu Sunsetter LXi
			Units: inches	Product: Swim Platform Cover
			Pages: 4 of 5	Date Modified: 14 April 2023