


# Dropzone Tower (P-980-BS) Folding Canopy Top Installation

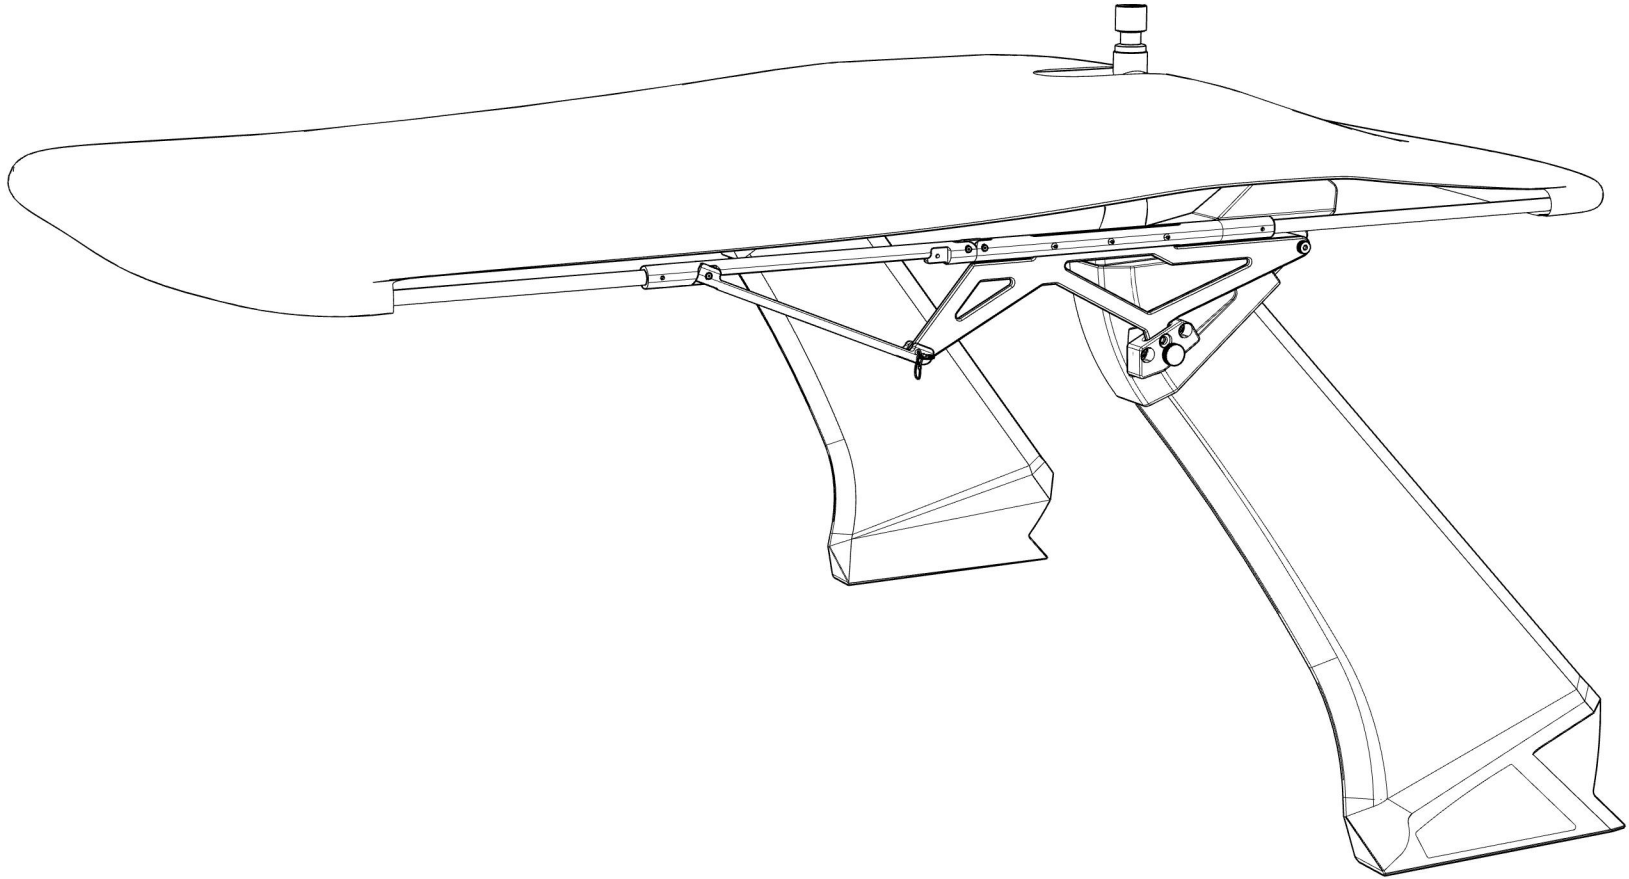

Tighten all bolts and verify that they are tight before each use. If you have any questions, please feel free to call, text, or email.

(801)-262-4017 - Text & Call

[covers@sewlong.com](mailto:covers@sewlong.com)




**Installation Video**

1


## Install Mounting Base:

Loosely fasten mounting base (1.1) to tower. Center holes and tighten mounting base (1.2) to tower.

1.1

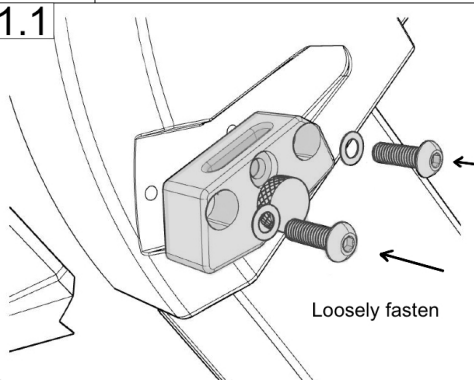

1.2

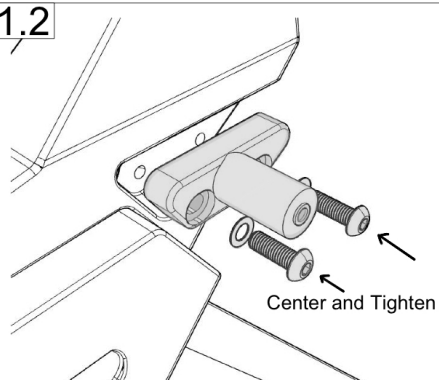

### 1 Parts:

(8) 1/2"-13 x 1-1/4" Socket Button Head Bolt



(8) 1/2" x 7/8" Flat Washer



(2) Hand Retractable Spring Plunger 3/4"



(1) CenDZ19 - STBD Mounts  
- STBD Aft  
- STBD Fwd



(1) CenDZ19 - PORT Mounts  
- PORT Aft  
- PORT Fwd




2


## Install Bracket:

Install Bracket using shoulder bolt in aft hole of bracket and aft base. Tilt plate down so it rests in groove of mounting base and aligns with spring plunger. If it rattles, twist mounting block so it binds against bracket and secures in place. Once aligned, tighten mounting bases.

2.1

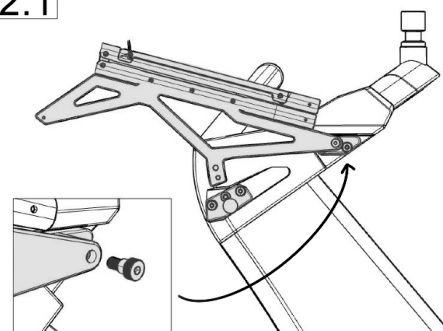


2.2

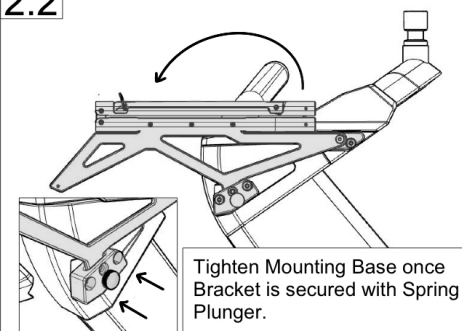


### 2 Parts:



(2) 5/8" x 1/2" Shoulder Bolt

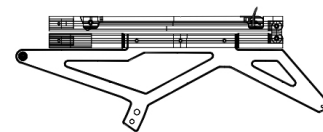

(1) STBD Tube Assembly and Bracket

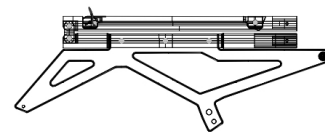


(1) PORT Tube Assembly and Bracket

3


## Install Frame:

Slide Frame into Tube Assembly until it bottoms out. Secure frame with set screws.


3.1

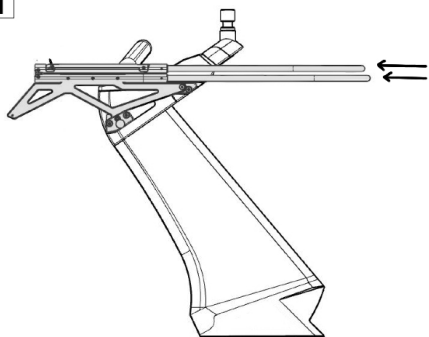

3.2

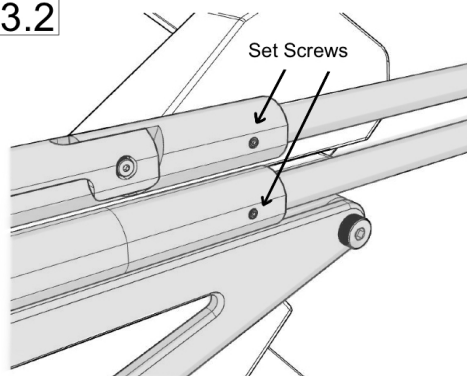

### 3 Parts:

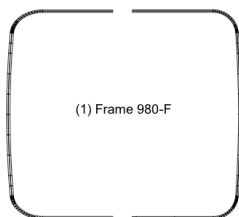


(1) Frame 980-F

4


## Install Canvas:

Fit the canvas around the ends of the frame and secure them with the zipper. Once the canvas is attached to the frame, rotate the frame forward. Secure in place by lowering strut and inserting pin in forward bracket hole.


4.1

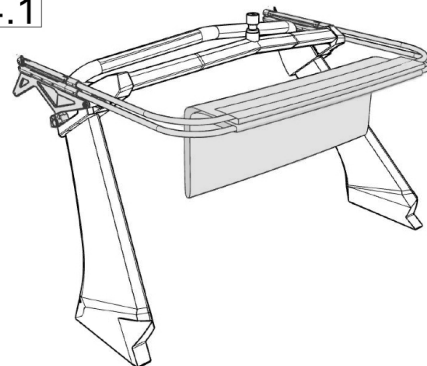

4.2

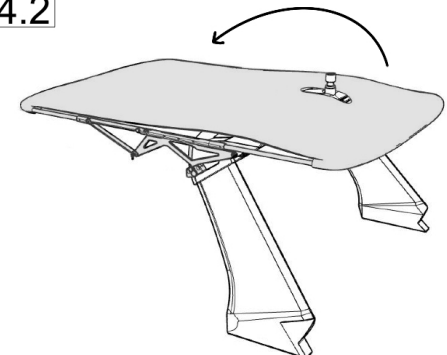

4.3

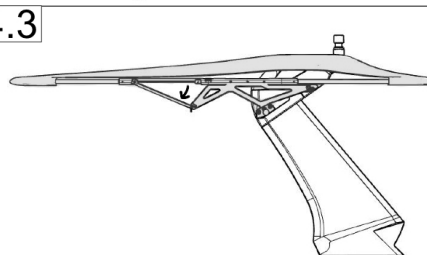

4.4

