


Dropzone Tower (P-980-BS)


Parts List

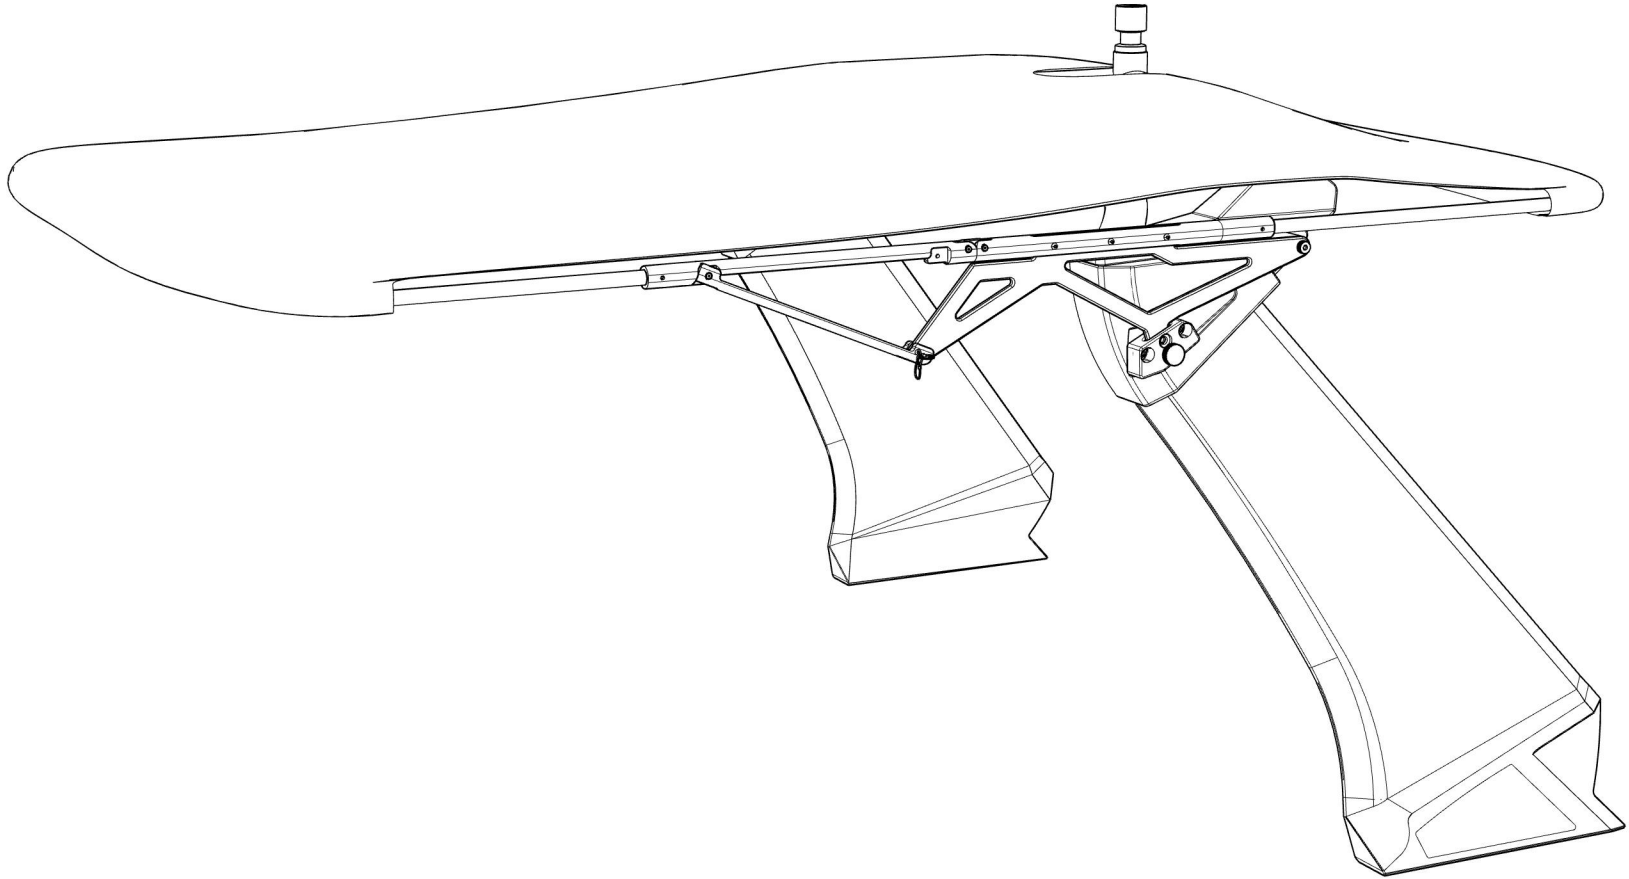

Tighten all bolts and verify that they are tight before each use. If you have any questions, please feel free to call, text, or email.


(801)-262-4017 - Text & Call

covers@sewlong.com

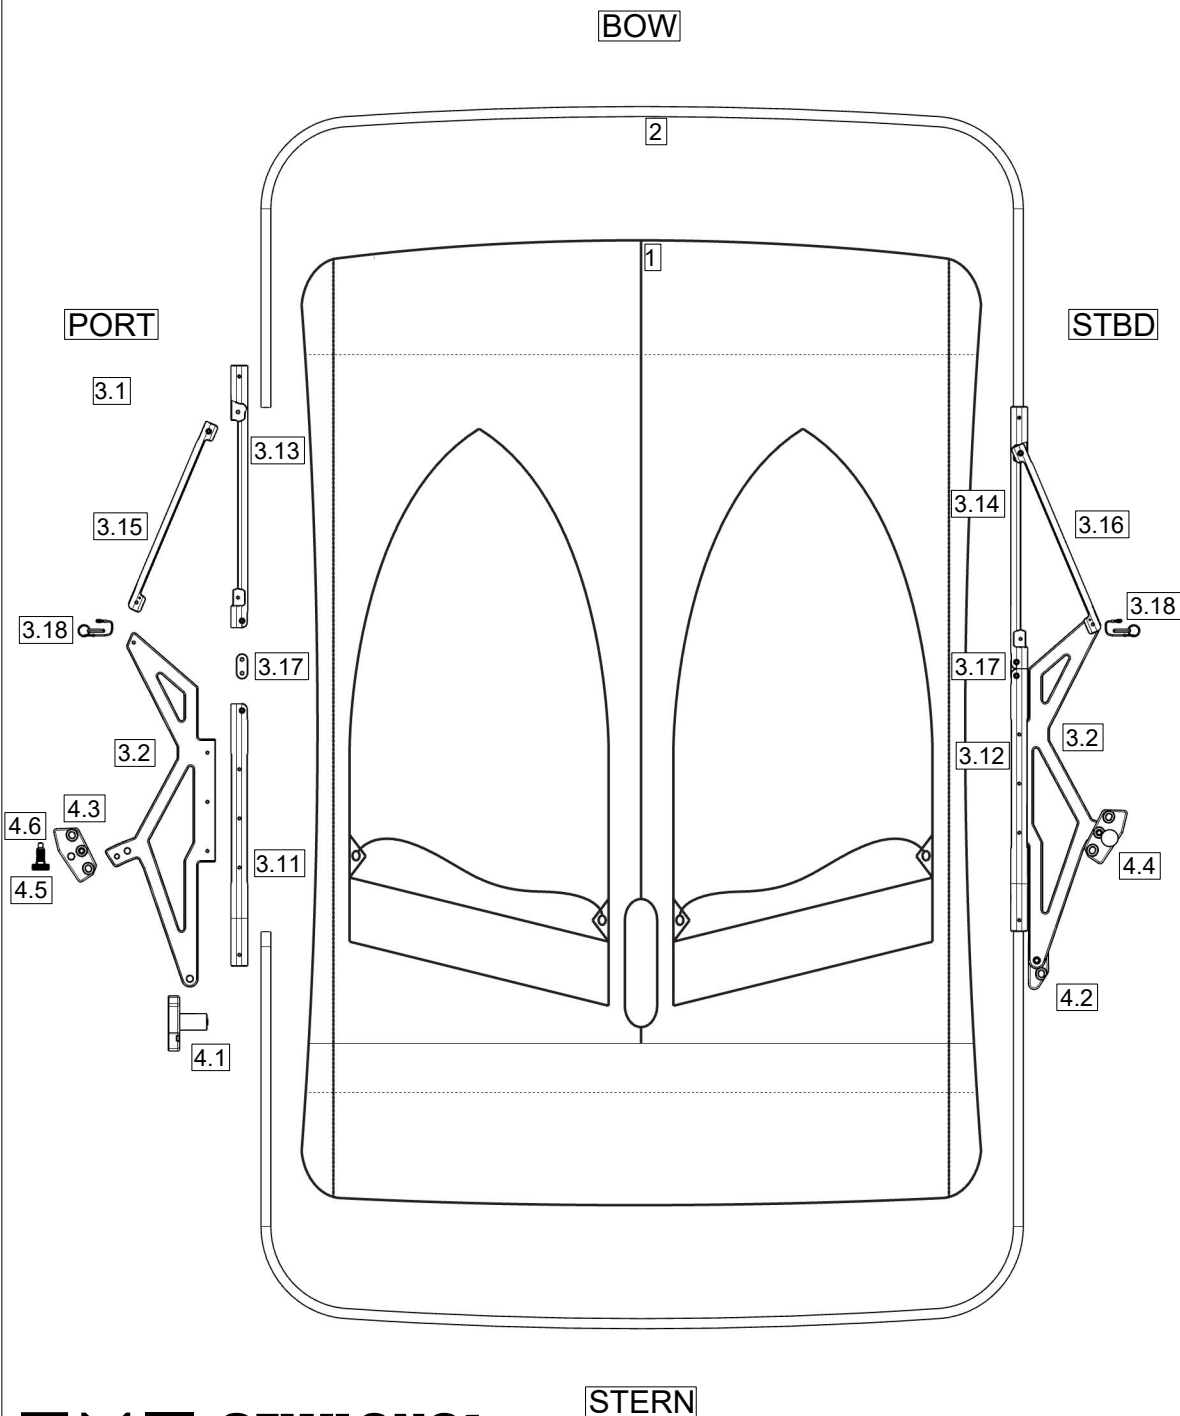

#	Description	Part No.	Kit Qty	Part Qty
1	Canvas	980-BS	1	
2	Frame	980-F	2	
3	FCT V3 - Hardware Tube Kit	CDZ19-BK	1	
3.1	FCT V3 - Tube Assembly			
3.11	Tube Aft - PORT	v3TA-P		1
3.12	Tube Aft - STBD	v3TA-S		1
3.13	Tube Fwd - PORT	v3TF-P		1
3.14	Tube Fwd - STBD	v3TF-S		1
3.15	Tube Strut - PORT	v3TF-P		1
3.16	Tube Strut - STBD	v3TF-S		1
3.17	Tubing Hinge	v3TH		2
3.18	1/4"x1.5 grab 303 Stainless w/Lanyard			2
3.19	Shoulder Bolt 0.3125 x 0.75 (5/16" x 0-3/4" W-1/4-20 Thread - Tubes)			6
3.191	Socket Cap Button Head Bolt 3/8" (SBHB-0.387)			2
3.192	Hex Drive Cup Point Socket Set Screw (5/16 - 18 X 1/4")			4
3.193	Socket Button Head Bolt 1-1/4" (SBHB-1.25 1/4-20 Thread)			6
3.2	CenDZ19-Bracket	CDZ19-B		2
3.3	FCT V3 - Bolt Kit	CDZ19-BK		
3.31	1/2" x 7/8" Flat Washer			8
3.32	5/8" x 1/2" Shoulder Bolt	v3BK-BS		2
3.33	1/2"-13 x 1-1/4" Socket Button Head Bolt	v3BK-BB		8
4	FCT V3 - Hardware Mount Kit	CDZ19-MK (Rev12)	1	
4.1	CenDZ19 - PORT Aft Mount	CDZ19-PAM		1
4.2	CenDZ19 - STBD Aft Mount	CDZ19-SAM		1
4.3	CenDZ19 - PORT Fwd Mount	CDZ19-PFM		1
4.4	CenDZ19 - STBD Fwd Mount	CDZ19-SFM		1
4.5	Hand Retractable Spring Plunger 3/4"			2
4.6	Threaded Black Delrin Spacer (for spring plunger)			2

3.3 FCT V3 Bolt Kit

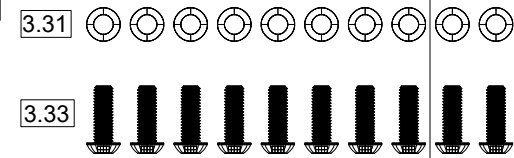

*Additional 2 bolts and washers available upon request

Tube Assembly Bolts

